



Instruction Sheet

Buddy Boat 120100

Store these instructions along with the enclosed maintenance checklist in a safe place. You may also access them on our website.



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please file this Instruction Sheet in an accessible location: the Instruction Sheet must be read and familiar to anyone who is using Southpaw Enterprises Equipment.

IMPORTANT: Please check equipment immediately for any damage that may have resulted during shipping. If any damage has occurred, please contact Southpaw Enterprises, Inc. immediately.

Warning: Failure to properly install a forged steel eyebolt (1/2" or 5/8") may result in serious injury or death. If you have any questions about the installation of the forged steel eyebolt, please contact Southpaw Enterprises

MATERIALS LIST:

- | | |
|-----------------------|-----------------------------------|
| 1 - Buddy Boat | 1 - Safety Snap Instruction Sheet |
| 1 - Instruction Sheet | 1 - Maintenance Checklist |
| 2 - Safety Snaps | |

INSTRUCTIONS FOR USE:

- The Buddy Boat may be suspended from a single suspension point for non-linear movement. **Note: a Southpaw Safety Rotational Device (#2000) must be used with any rotational movement to prevent damage to the equipment.**
- The Buddy Boat may be attached to two suspension points located from 48" to 60" apart for linear movement.
- Use the Southpaw Height Adjusters (#5000) to raise or lower the Buddy Boat to the appropriate height.
- One end of the Buddy Boat has a clear "window" that may be lowered for ease of entry and exit by releasing the "hook" part of the hook and loop fastener holding the top and sides of the window. The window may be secured out of the way by folding it back underneath and attaching it to the "loop" fasteners on each side.
- The body of the Buddy Boat may be removed for cleaning by unzipping the zippers on each side.

WEIGHT LIMIT: 300 LBS.

SPACE REQUIREMENTS: Use caution to keep a minimum of 6 foot clear distance from walls and other obstacles.

MAINTENANCE CHECKLIST:

The following wear points should be checked on a monthly basis and recorded on the checklist enclosed.

- Check seams for rips or tears. If rips or tears are found, discontinue use immediately until repaired.
- Check ropes for loose or missing splice locks.* If loose or missing splice locks are found, discontinue use until repaired.
- Check wood for cracks or splinters. If cracks are found, discontinue use immediately. Splinters may be sanded smooth and refinished with clear lacquer.
- * A splice lock is the metal clip near the end of the ropes.
- Check Safety Snaps for wear (see Safety Snap Instruction Sheet).

MATTING PRECAUTIONS:

- Always use appropriate matting.
- Crash mats and wall mats must be used with all hanging equipment.

CLEANING INSTRUCTIONS:

Check with your infectious disease department before using these procedures.

- Check for client allergies first.
- Cover is machine washable using cold water and mild detergent. Tumble dry - no heat.

REPLACEMENT COVERS:

- Replacement covers (#120105) are available. You may want to have an extra cover to use while one is being cleaned.

CAUTION

- ◆ **Check ceiling eye bolt for wear and movement. Use a Southpaw Safety Rotational Device to prevent abnormal wear.**
- ◆ **Floor mats of proper thickness should be positioned properly under and around all suspended equipment.**

Safety Precautions - The safety of your clients is dependent on the appropriate choice of activity to match, yet challenge their physical abilities. Use appropriate spotting / safety techniques. In addition, the layout of your activity area, proper installation and maintenance of your equipment is critical. Southpaw equipment is not intended for recreational or outdoor use. Under no condition should this equipment be used without proper supervision.

This sheet is for example only. It is not meant to, in any way, replace local, county, state, or Federal standards. Be aware - it is your responsibility to find all pertinent safety information that pertains to your facility.

If you have any questions or comments, please call or write
Southpaw Enterprises, Inc.
P.O. Box 1047, Dayton, Ohio 45401 -1047
Toll Free - (800) 228-1698
Please visit us @ www.southpaw.com

© 2019 Southpaw Enterprises, Inc.