

Instruction Sheet Flexion Disc Vinyl Pad 121909

Store these instructions in a safe place or with the enclosed maintenance checklist



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please file this Instruction Sheet in an accessible location: the Instruction Sheet must be read and familiar to anyone who is using Southpaw Enterprises Equipment.

IMPORTANT: Please check equipment immediately for any damage that may have resulted during shipping. If any damage has occurred, please contact Southpaw Enterprises, Inc. immediately.

MATERIALS LIST

121909

1 - Flexion Disc Vinyl Pad

ASSEMBLY PROCEDURES

- Put the body on a table laying on it's side with the small, wood disc on the end sticking off the table.
- Remove the washers, lock washers, and bolts from the bottom of the disc.
- Place the vinyl cover on the bottom of the disc to cover the wooden side of the disc. With the vinyl side of the base facing the body, line up the holes in the base with the holes on the body (The center hole on the base is a clearance hole for the welded nut only). The carpeted side will now be facing the floor when the swing is in use.
- Onto each Button head bolt place a lock washer, followed by a flat washer (see illustration). Put each bolt through a hole the base, into the padded body, and hand tighten.
- Tighten each nut securely with an allen wrench.

CLEANING INSTRUCTIONS

- Check for client allergies first.
- This vinyl can be cleaned with any prescribed disinfectant.
- Dry before using.

If you have any questions or comments, please call or write Southpaw Enterprises, Inc. P.O. Box 1047, Dayton, Ohio 45401 -1047 Toll Free - (800) 228-1698 Visit us at southpaw.com