



SOUTHPAW®

Instruction Sheet **Wireless Vibro Bean Bag Chair 303255**



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please file this Instruction Sheet in an accessible location. The Instruction Sheet must be read and familiar to anyone who is using Southpaw Enterprises Equipment.

Store these instructions along with the enclosed maintenance checklist in a safe place. You may also access them on our website.

IMPORTANT: Please check equipment immediately for any damage that may have resulted during shipping. If any damage has occurred, please contact Southpaw Enterprises, Inc. immediately.

MATERIALS LIST

Southpaw Vinyl Outer Cover (light blue)
Fabric Inner Liner (tan color) and Foam
Instruction Sheet

Wireless Vibro-Acoustic Receiver Amplifier and Power Supply Cord
Vibro-Acoustic Assembly with vibro-acoustic cord connection
Maintenance and Inspection Checklist

INSTRUCTIONS FOR ASSEMBLY

Refer to the Step by Step directions with images on the back of this instructions sheet.

OPERATION:

In order to make the Bean Bag vibrate the product, the must be paired with a Bluetooth connection device (not included) which has audio file playing capabilities. To pair, on the audio playing device's pairing settings, search for the Bluetooth device called "F9000S" and pair/sync the audio playing device with the "F9000S" according to the directions of the Bluetooth-enabled audio player device.

After successfully pairing, select the desired music or sound files to play from the audio playing device. Note: Sound/Music selections with lower toned "bass" sounds will create more vibration effects. The sound volume may be adjusted using the audio playing device settings or using the adjustment dial on the wireless amp.

CLEANING / INSPECTION / MAINTENANCE

Cleaning Instructions: Check for client allergies first. The outer vinyl cover can be cleaned with any prescribed disinfectant. Dry before using.

Inspect covers and cords prior to use for any noticeable wear and tear such as tears, cuts, or loose connections. If any visible damages are observed, discontinue use until the damaged item (s) are repaired. Record all maintenance and inspection checks on the included checklist.

STORAGE PROCEDURES

Store where not accessible by clients without proper supervision.

CARE SHOULD BE TAKEN TO REMOVE ALL SHARP OBJECTS FROM POCKETS, AS WELL AS ANY METAL BRACES, PRIOR TO USING THE VIBRO-ACOUSTIC FOAM CHAIR

Safety Precautions - The safety of your clients is dependent on the appropriate choice of activity to match, yet challenge their physical abilities. Use appropriate spotting / safety techniques. In addition, the layout of your activity area, proper installation and maintenance of your equipment is critical. Southpaw equipment is not intended for recreational or outdoor use. Under no condition should this equipment be used without proper supervision.

This sheet is for example only. It is not meant to, in any way, replace local, county, state, or Federal standards. Be aware - it is your responsibility to find all pertinent safety information that pertains to your facility.



SOUTHPAW®

FORM CODE: XI- 303255 © 2020 Southpaw Enterprises, Inc.

If you have any questions or comments, please call or write
Southpaw Enterprises, Inc.
P.O. Box 1047, Dayton, Ohio 45401 -1047
Toll Free - (800) 228-1698
Come see us on the World Wide Web at
<http://southpawenterprises.com>



SOUTHPAW®

Assembly Instructions For Wireless Vibro Bean Bag Chair

Place the Southpaw outer vinyl liner over the inner fabric liner with shredded foam in it. Line up the zippers as shown in Image 1 at right.

1



Carefully open the inner liner zipper to expose the shredded foam inside and place the Foam Vibro Assembly into the shredded foam, see Image 2.

2



Slowly and gently bury the Foam Vibro assembly by nestling it into the shredded foam, see image 3. Carefully scoop a small amount of the shredded foam up and over top of the Foam Vibro Assembly while still keeping the shredded foam pieces inside the tan colored fabric inner liner.

Close the zipper on the fabric inner liner leaving the wire with red and black plug ends on the outside coming out of the end where zipper closes.

3




Feed the red and black plug ends into the small opening at the bottom of the 8" x 8" to the inside of the pocket area with Southpaw logo and then gently pull the wires out through the top opening of the pocket area, see image 4 at right. Close the outer vinyl liner cover's zipper.

4




Attach the red and black plug ends (red to red / black to black) and round end of power supply cord into the Wireless Amplifier unit as shown in images 5 and 6 at right. Place the Wireless Amplifier inside the pocket so the on/off switch on the unit can be easily accessed from the top opening of pocket.

5

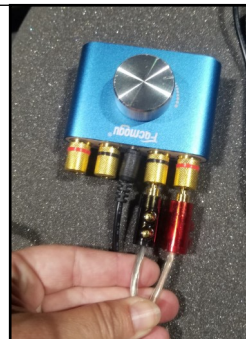

6

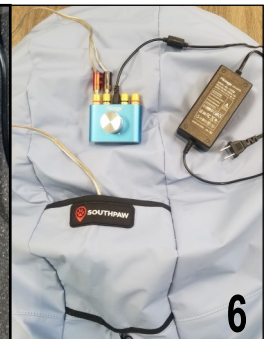

The power cord may now be plugged into the nearest available electrical power outlet to provide power to the wireless amplifier unit. Bluetooth Pairing instructions are listed in the "Operations" section of this instruction sheet.

7

