



southpaw enterprises, inc.[®]

Store these instructions along with the enclosed maintenance checklist in a safe place. You may also access them on our website.

Instruction Sheet

ICE Fiber Optic Light Source #303501



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please file this Instruction Sheet in an accessible location. The Instruction Sheet must be read and familiar to anyone who is using Southpaw Enterprises Equipment. If this Instruction Sheet is misplaced, please call or write for a replacement. (See address below).

IMPORTANT: Please check equipment immediately for any damage that may have resulted during shipping. If any damage has occurred, please contact Southpaw Enterprises, Inc. immediately.

MATERIALS LIST

-ICE Fiber Optic Light Source -Power Supply

OPTIONAL MATERIALS

-Fiber Optic Strands or Carpet -Super Switch or Power Cube
-Remote Program Switch

TOOLS NEEDED

-1/8" Hex Wrench

SAFETY CONSIDERATIONS

- This product is NOT a toy. It should only be used under the supervision of an adult.
- Adequate ventilation must be provided. Do not block the ventilation holes.
- Should the product cease to function, contact Southpaw Enterprises immediately. Attempted repairs by non-approved personnel could lead to injury or damage to the unit and will void the warranty.
- The unit operates on Low Voltage. Use only the supplied external power supply.

INSTRUCTIONS FOR ASSEMBLY

- The unit is designed to accept any fiber optic spray, carpet or any product with a standard 30mm common end.
- Insert the common end into the collar on the side of the unit and tighten the set screw on top of the collar with a 1/8" hex wrench.
- If the unit requires mounting, be sure to mount to a stable surface.
- Plug the external power supply in to the rear of the unit.
- There is an antenna attached to the rear of the unit. If it is removed the usable range of the unit with the Super Switch or Power Cube will be greatly reduced. The antenna should be kept away from metallic objects.

OPERATION


- Plug the unit in and push the switch to the "ON" position.
- To enter the **PASSIVE** mode, push the small, round, red button next to the ON/OFF switch on the rear of the unit. The light start with Red after about 6 seconds and cycle through the eight colors.
- In this mode, the unit will not turn off until the unit is switched off.
- If the unit is mounted in such a place that the initialization button is difficult reach, a Remote Program Switch can be used. Insert the jack of the switch into the socket next to the initialization button on the rear of the unit. With the unit turned on, press the red button on the switch to initialize the light.
- To operate in **ICE Interactive** mode, the unit can be paired with an optional wireless switch (Power Cube or Super Switch). To connect a switch, press and hold the red initialization switch on the unit while pressing the initialization button on the Super Switch and then pressing any of the colored buttons on top of the Super Switch OR turning the Power Cube to the next color.

MAINTENANCE

- The outside of the unit can be wiped with a cloth. If a damp cloth is used, make sure the unit is completely dry prior to operation.
- Compressed air can be used to blow dust out of the inside of the unit. The air can be cold—be sure the unit has returned to room temperature prior to operation.
- No other maintenance is necessary on the Light Source. The LED lights should last 50,000 hours.

Safety Precautions - The safety of your clients is dependent on the appropriate choice of activity to match, yet challenge their physical abilities. Use appropriate spotting / safety techniques. In addition, the layout of your activity area, proper installation and maintenance of your equipment is critical. Southpaw equipment is not intended for recreational or outdoor use. Under no condition should this equipment be used without proper supervision.

This sheet is for example only. It is not meant to, in any way, replace local, county, state, or Federal standards. Be aware - it is your responsibility to find all pertinent safety information that pertains to your facility.

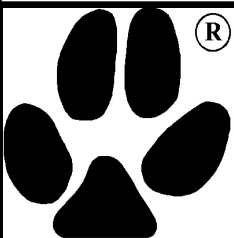

**Southpaw
Enterprises Inc.®**

If you have any questions or comments, please call or write
Southpaw Enterprises, Inc.

P.O. Box 1047, Dayton, Ohio 45401 -1047

Toll Free - (800) 228-1698

Come see us on the World Wide Web at

<http://southpawenterprises.com>