



Instruction Sheet Height Adjuster 5000

Store these instructions with the enclosed maintenance checklist in a safe place. You may also access them on our website.



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please file this Instruction Sheet in an accessible location: the Instruction Sheet must be read and familiar to anyone who is using Southpaw Enterprises Equipment.

IMPORTANT: Please check equipment immediately for any damage that may have resulted during shipping. If any damage has occurred, please contact Southpaw Enterprises, Inc. immediately.

Warning: Failure to properly install a forged steel eyebolt (1/2" or 5/8") may result in serious injury or death. If you have any questions about the installation of the forged steel eyebolt, please contact Southpaw Enterprises Customer Service at 1-800-228-1698.

MATERIALS LIST

- 1 - Height Adjuster with Safety Snap.
- 1 - Instruction Sheet.
- 1 - Safety Snap Instruction Sheet.
- 1 - Maintenance Checklist.

MINIMUM HEIGHT REQUIREMENT: 8 ft.

SAFETY ROTATIONAL DEVICE NEEDED

MUST be used with a Southpaw Safety Rotational Device to prevent damage to your equipment.

WORKING LOAD: 1000 lbs.

Hanging Procedure

No assembly required.

1. Push the safety trigger upward to open the cam gate to attach to the rope (See figure 1).
2. Your rope slips in here (See figure 2).
3. To move the Height Adjuster up, hold pressure on the rope below the body and push up on the Height Adjuster to the desired height (See figure 3).
4. To move the Height Adjuster down, release the lock on the cam by holding the rope below the Height Adjuster, and pushing up on the safety trigger while putting upward pressure on the Height Adjuster. This will unlock the cam and allow you to move the Height Adjuster to the desired height (See figure 3).

MAINTENANCE CHECKLIST

All of the following wear points should be checked on a monthly basis and recorded on the checklist enclosed.

- Check the cam tips to be sure they are not bent or broken.
 - Check cam for failure to close.
 - Check spring in trigger.
 - Check for wear on Safety Snap (See Safety Snap Instruction Sheet).
- If problems are found with any of the above, discontinue use immediately and contact Southpaw Enterprises for repair or replacement.

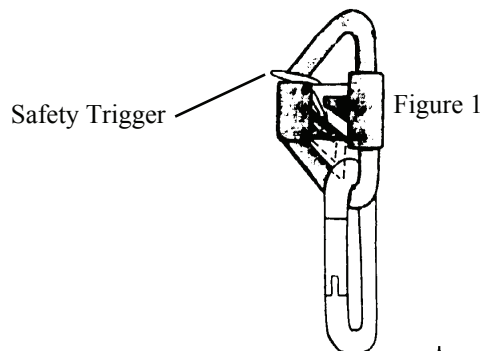


Figure 1

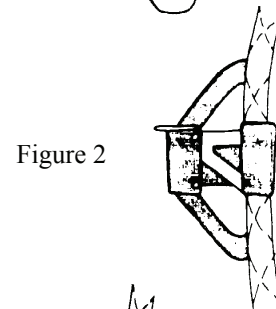


Figure 2

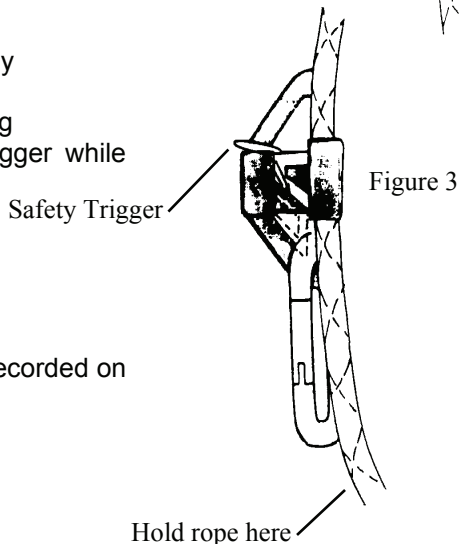


Figure 3

Hold rope here

MATTING PRECAUTIONS

Crash mats must be used with all suspended equipment.

STORAGE PROCEDURES

- Store where not accessible by clients without proper supervision.
- Remove from rope when not in use.

CLEANING INSTRUCTIONS

Check with your infectious disease department before using these procedures.

- Do not oil the Height Adjuster.
- Do not immerse in water.
- Dust only or blow with air gun.

CAUTION

- ◆ **Check ceiling eye bolt for wear and movement. Use a Southpaw Safety Rotational Device to prevent abnormal wear.**
- ◆ **Floor mats of proper thickness should be positioned properly under and around all suspended equipment.**

Safety Precautions - The safety of your clients is dependent on the appropriate choice of activity to match, yet challenge their physical abilities. Use appropriate spotting / safety techniques. In addition, the layout of your activity area, proper installation and maintenance of your equipment is critical. Southpaw equipment is not intended for recreational or outdoor use. Under no condition should this equipment be used without proper supervision.

This sheet is for example only. It is not meant to, in any way, replace local, county, state, or Federal standards. Be aware - it is your responsibility to find all pertinent safety information that pertains to your facility.



If you have any questions or comments, please call or write
Southpaw Enterprises, Inc.
P.O. Box 1047, Dayton, Ohio 45401 -1047
Toll Free - (800) 228-1698
Come see us on the World Wide Web at <http://southpawenterprises.com>