




## Sensory Wall Tube - Installation Instructions



**Products Covered in  
this manual:**

**SWT1020U  
SWT1520U  
SWTO1020U  
SWTO1520U**

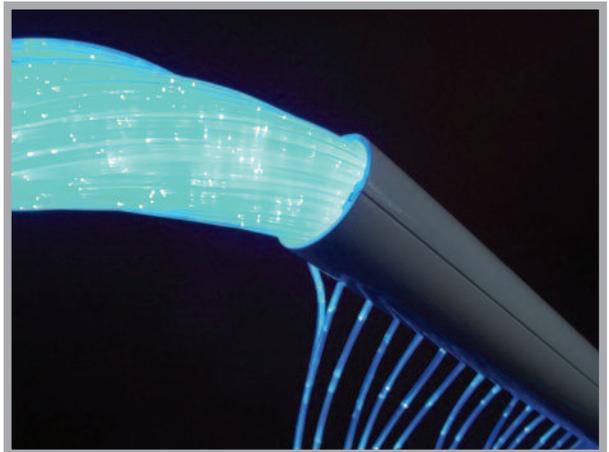


## Thank you for purchasing this fiber optic sensory lighting system.

To safely enjoy the full benefits and effects that this system can provide, please follow these installation instructions fully. Universal Fiber Optics take no responsibility for any accident or mishap arising from improper use or installation of this product.


Before proceeding with installation, please verify that the supporting structure can safely bear the weight of all installed units, cables and any other equipment.

If you have purchased this product as part of a complete kit which includes an illuminator unit, then please also fully read the operating instructions supplied with it.

### Items included in this system

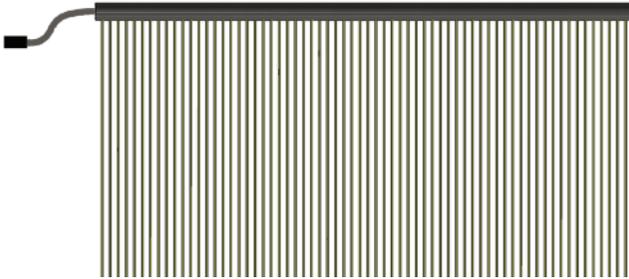

1 x sensory wall tube

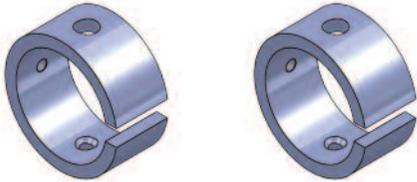

2 x mounting brackets

### Optional items (depending on product purchased)




1 x illuminator


## Installation Guide

Mark positions for 2 x mounting brackets on the wall. These should be around 50mm from each end of the wall tube. Drill holes to take wall plugs suitable for M4 self tapping screw. Insert wall plugs into holes and securely screw the mounting brackets to the wall.


Note that wall plugs and screws required will depend on the type of wall surface you are mounting the tube to. Ensure that you use the correct products and if in any doubt, consult a suitably qualified person.

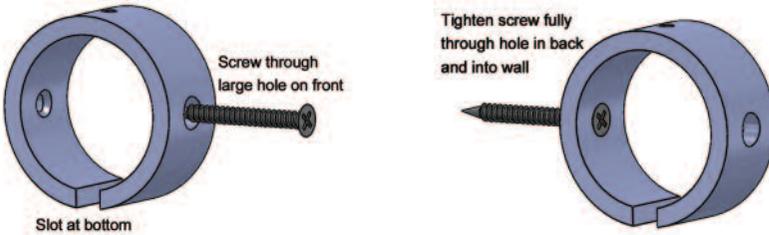

Slide the wall tube through the mounting brackets - the fiber tails will slide through the cut out in the bottom of the brackets,

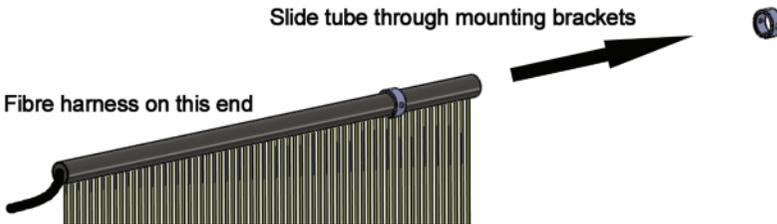

Secure the wall tube to the brackets by tightening the supplied grub screws into the top holes on the brackets.

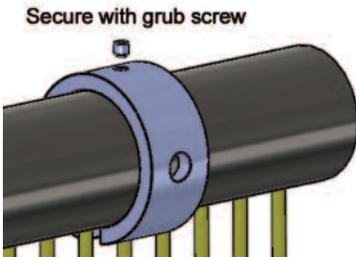

Plug the fiber harness into the illuminator and switch on.



Universal Fiber Optics Ltd.  
6119A Clark Center Avenue  
Sarasota  
Florida 34238

Tel: 1-800-UFO-5554 - Tel: 941-343-8115  
Fax: 941-330-0522  
[www.fiberopticlitching.com](http://www.fiberopticlitching.com)  
[info@fiberopticlitching.com](mailto:info@fiberopticlitching.com)